

REMOVE THESE SHIPPING TABS BEFORE PLAYING YOUR SAXOPHONE

In order to protect your new Saxophone during shipping, it was necessary to secure certain keys and pads from moving. Before you can play your new Saxophone, you must remove the nine (9) shipping tabs shown below. Carefully remove each tab and throw them away. They are no longer needed.

